

Modular Perimeter Jack Stand

Adjustable from 48" to 10" designed primarly to be used with the Norco 12.5 ton standard height jack

-Postion the angle of the jacking head under the perimeter of the modular home

-Jack Shelf is pinned with a dual stand pin for stability, and full capacity of the stand

-When raising or lowering, use the 5/8" stand pin to set, and hold the height of the Jacking Head while the jack is released and re-set.

-To go lower than 15.5" with the jacking head, the Jack Shelf is removed, and the bottle jack is used directly on the base, under the Jacking Head angle.



